ASSEMBLY INSTRUCTIONS

EEI-7247

V0.10.23.24

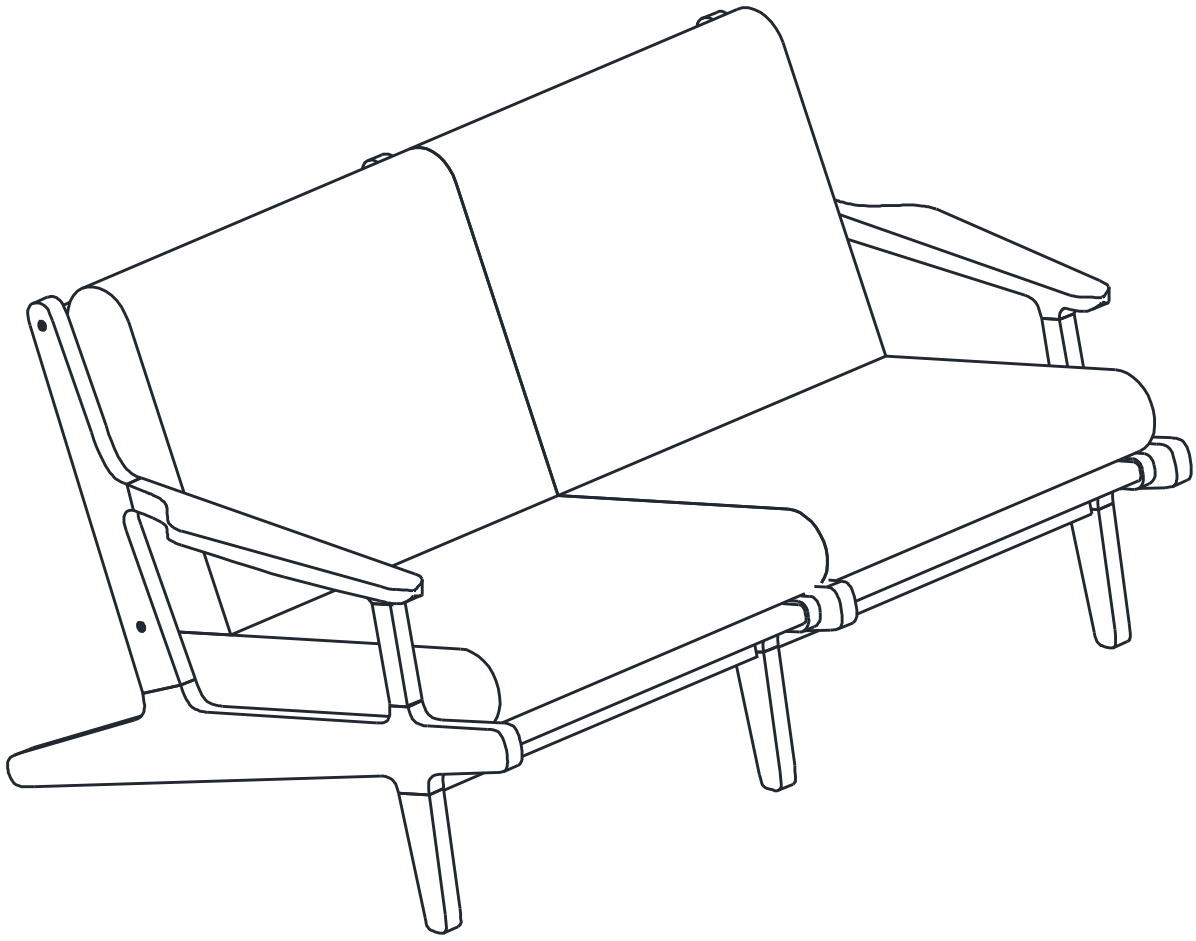

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

*modway

Let's get started!

*modway

Read through all of the instructions before starting

Care instructions are listed in the last step of this manual

Approx. 30 minutes assembly time

Make sure you have all parts and components before discarding any packing materials

2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Back Rail 1 (With Bolt)	x2
2	Back Rail 2	x2
3	Seat Base	x2
4	Left Frame	x1
5	Right Frame	x1
6	Middle Frame	x1
7	Batyline	x2
8	Back Cushion	x2
9	Seat Cushion	x2

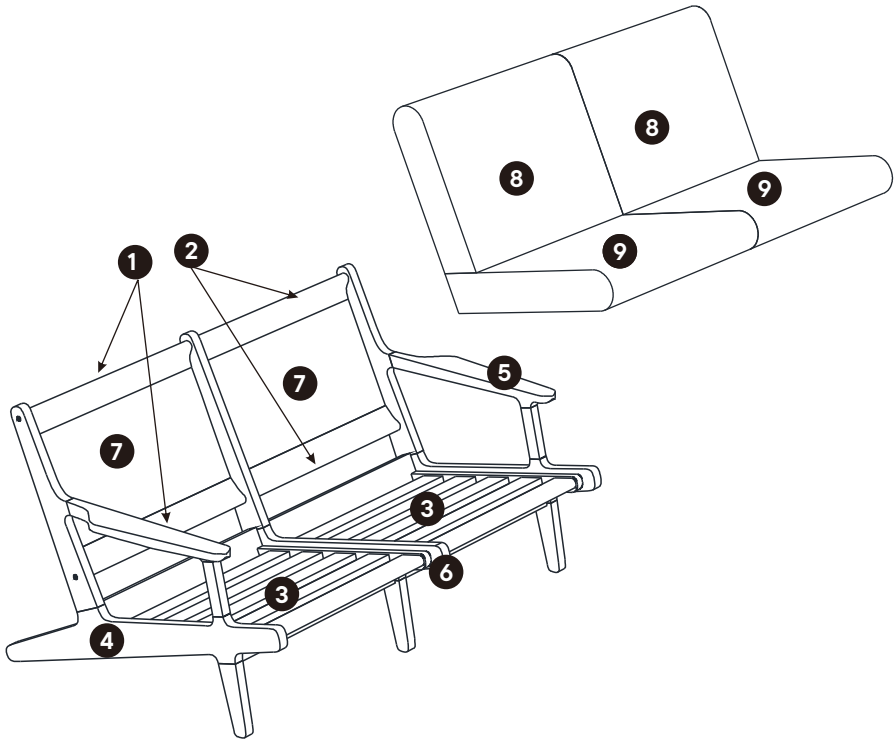

Provided hardware:

A		JCBC M8x40mm	x8
B		JCBC M6x30mm	x4
C		Allen Key M8	x1
D		Allen Key M6	x1
E		Dowel Plug	x4

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

COMPONENTS

1	Back Rail 1 (With Bolt)	x2
3	Seat Base	x1
4	Left Frame	x1

HARDWARE

A	JCBC M8 x 40mm	x2

TOOLS

C	Allen Key M8	x1

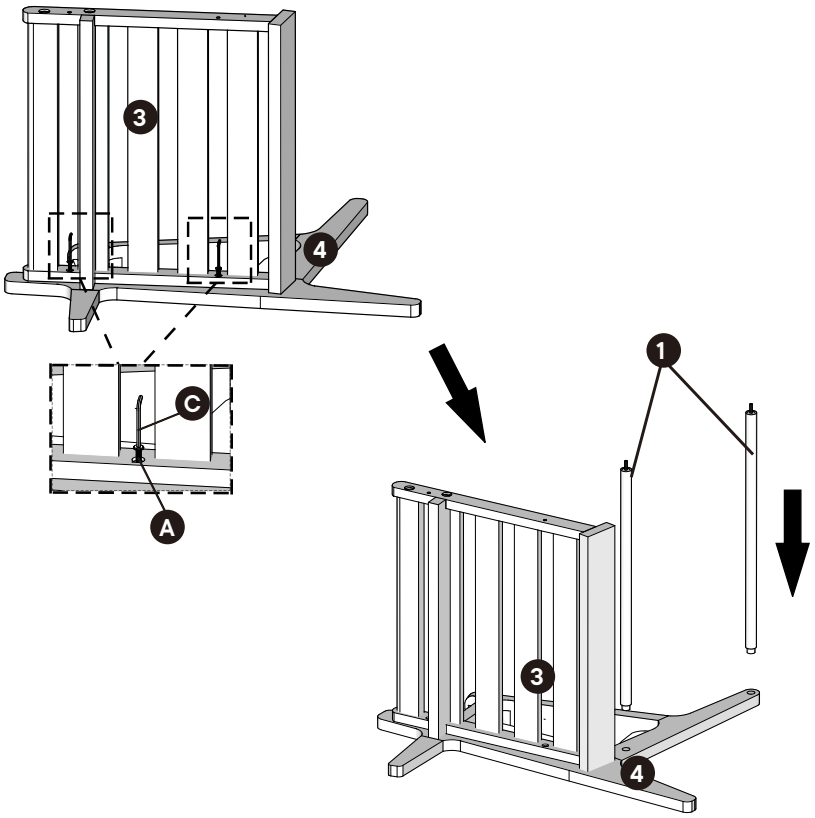

Step 2

COMPONENTS

7	Batyline	x1

HARDWARE

B	JCBC M6 x 30mm	x2

TOOLS

D	Allen Key M6	x1

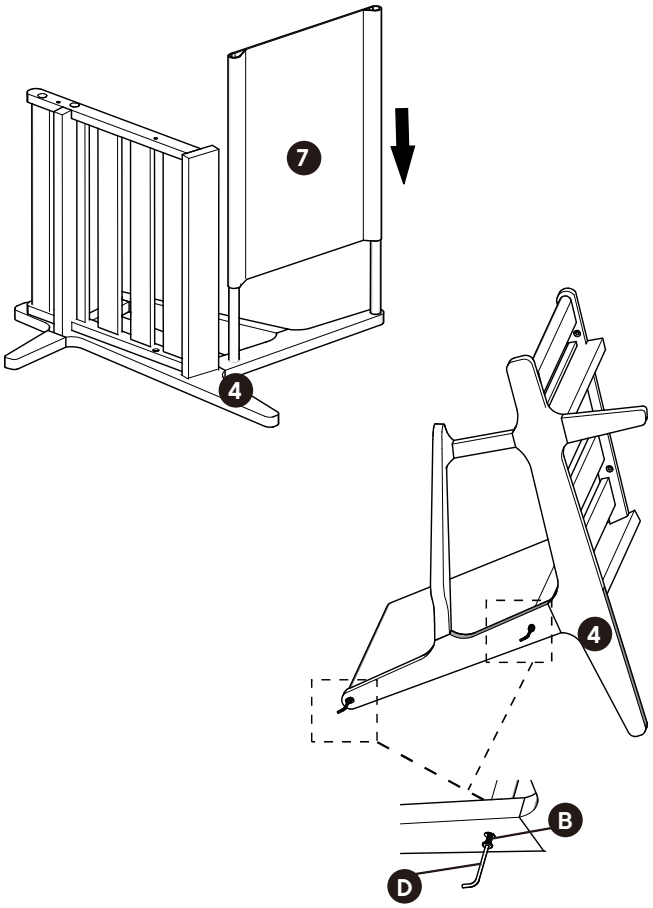

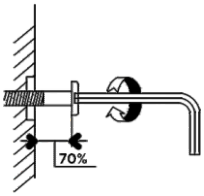

NOTE : Do not fully tighten the bolt.

Step 3

COMPONENTS

6	Middle Frame	x1

HARDWARE

A	JCBC M8 x 40mm	x2

TOOLS

C	Allen Key M8	x1

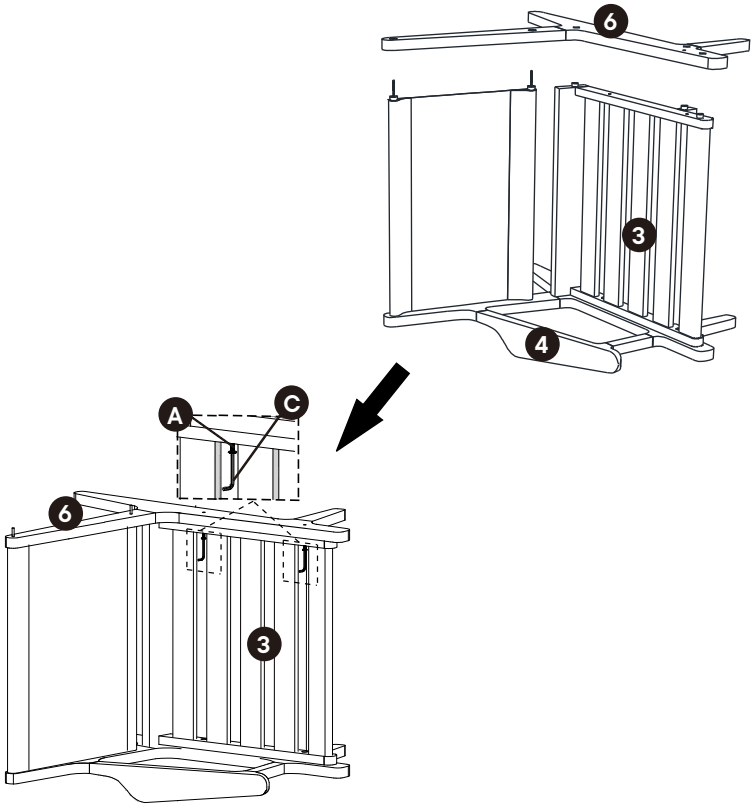

Step 4

COMPONENTS

2	Back Rail 2	x2
3	Seat Base	x1
7	Batyline	x1

HARDWARE

A	JCBC M8 x 40mm	x2

TOOLS

C	Allen Key M8	x1

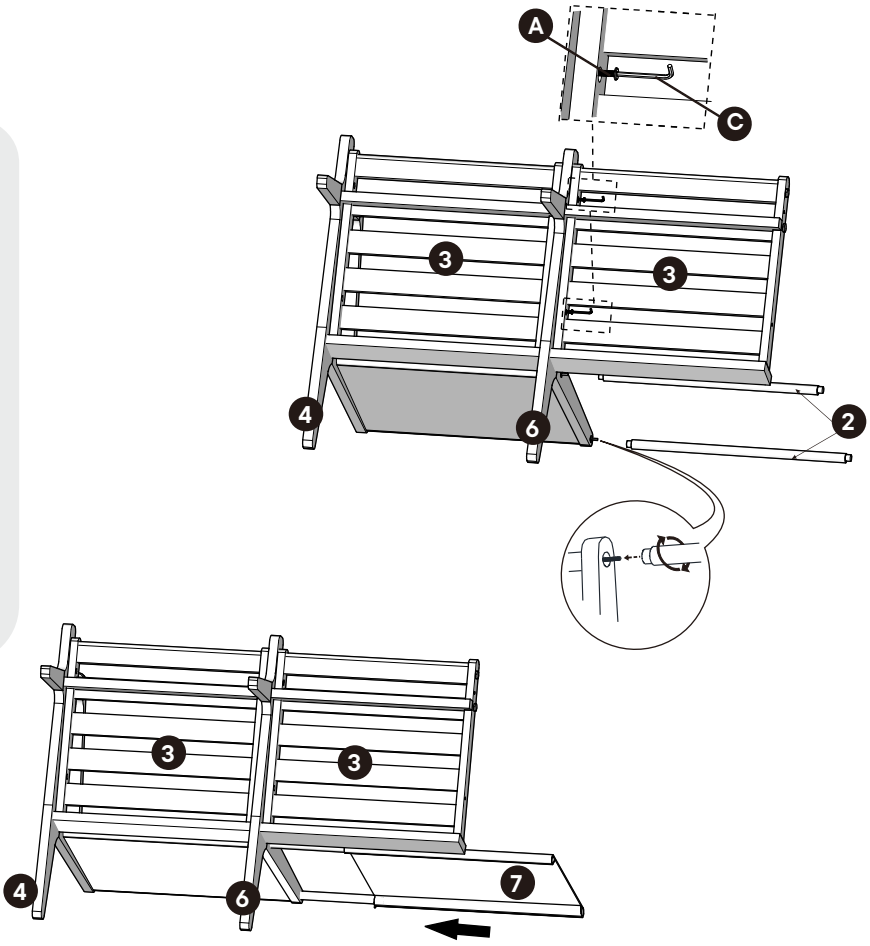

Step 5

COMPONENTS

5	Right Frame	x1

HARDWARE

A	JCBC M8 x 40mm	x2

TOOLS

C	Allen Key M8	x1

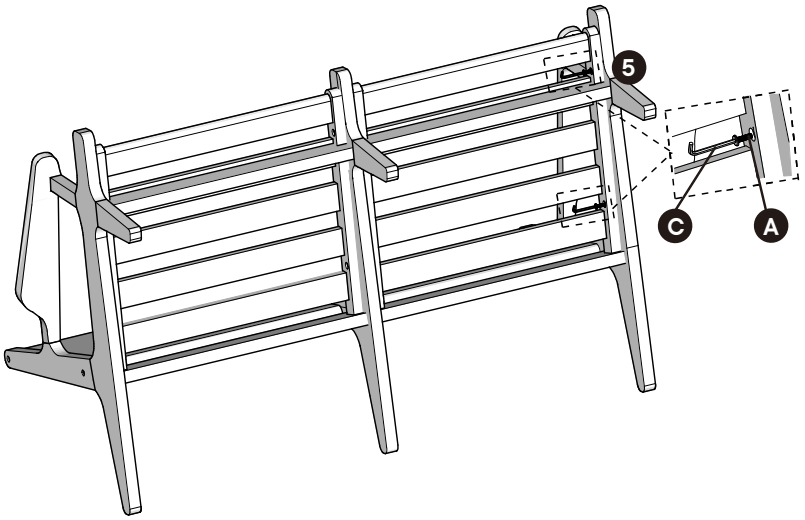

Step 6

COMPONENTS

5	Right Frame	x1

HARDWARE

B	JCBC M6 x 30mm	x2

TOOLS

D	Allen Key M6	x1

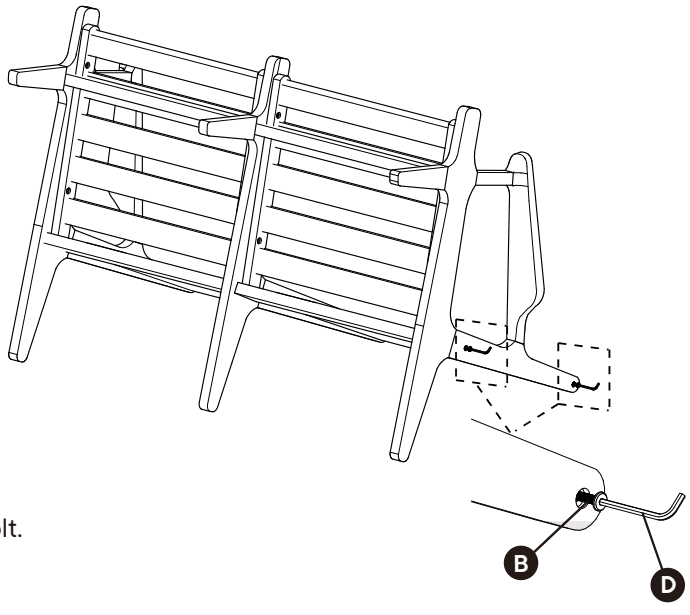

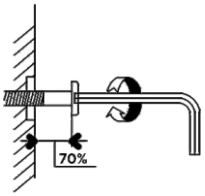

NOTE : Do not fully tighten the bolt.

Step 7

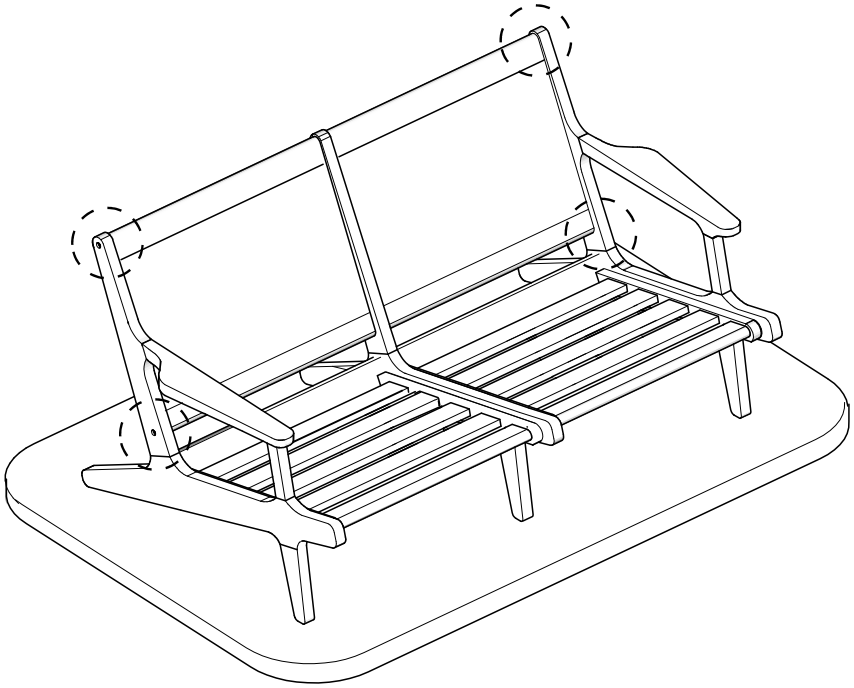

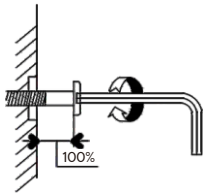

NOTE : Use the allen key to tighten all the bolts securely.

Step 8

HARDWARE

E	**Dowel Plug**	**x4**

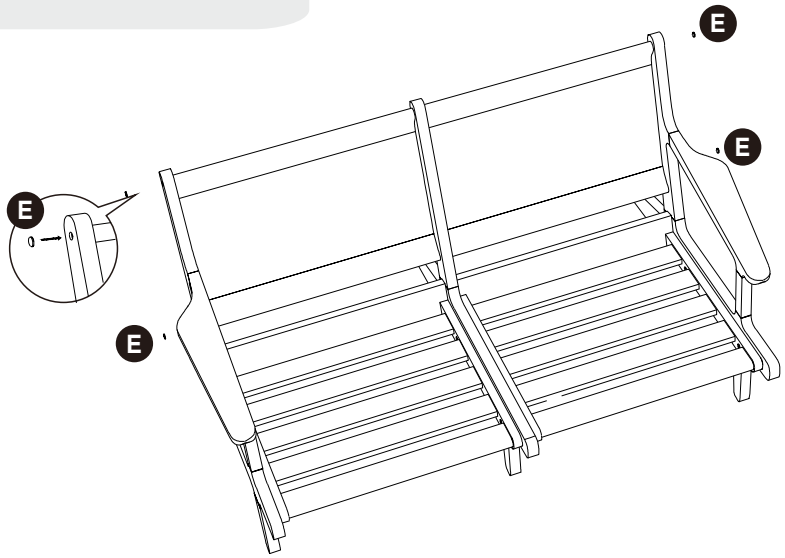

Step 9

COMPONENTS

9	Seat Cushion	x2

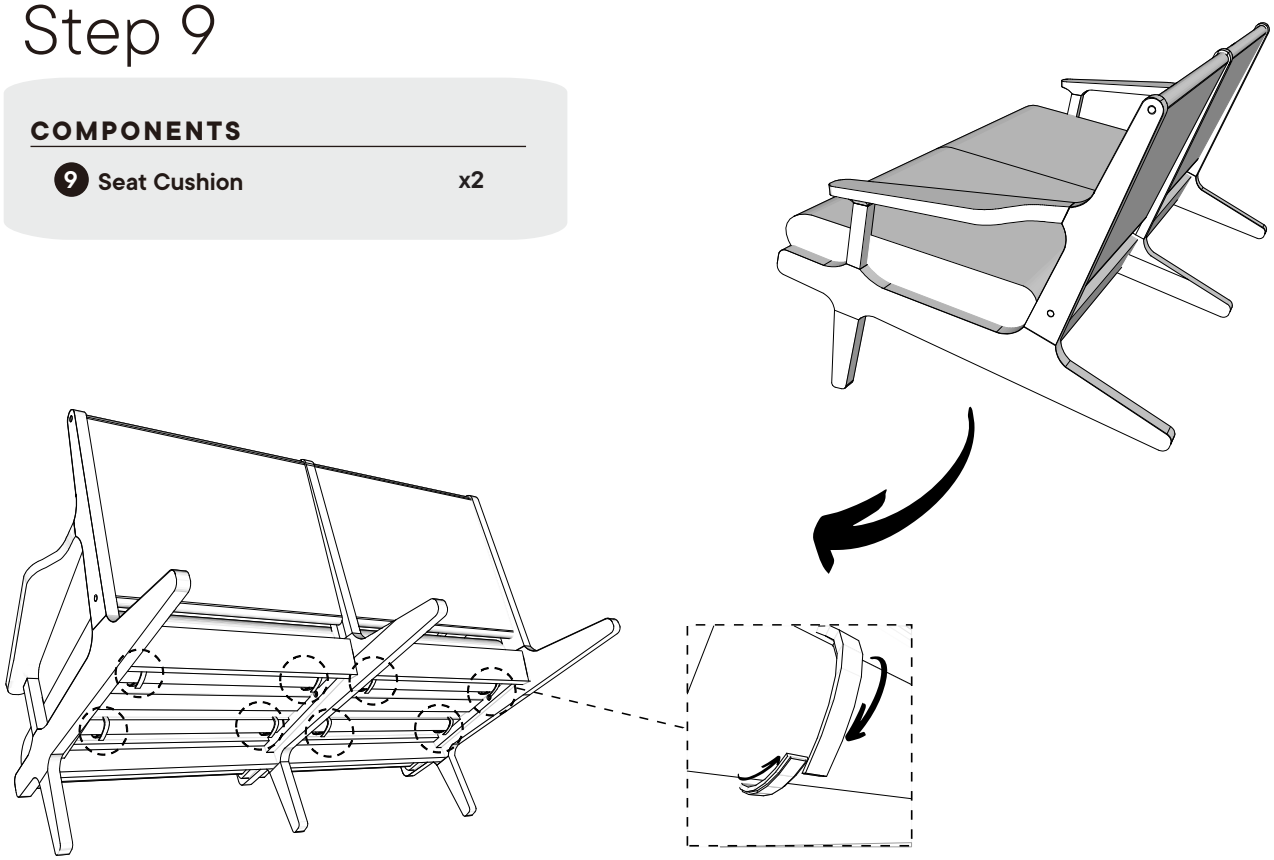

Step 8

COMPONENTS

8	Back Cushion	x2

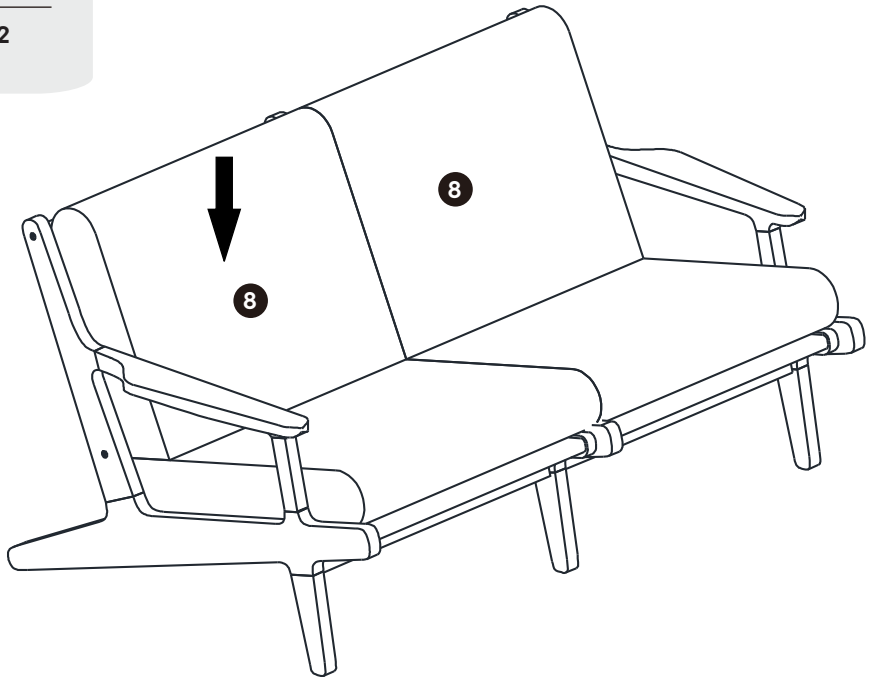

Great job!

Your new sofa is complete.

CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Retain the rich wood color by occasionally sanding lightly and applying a teak cleaner and protectant. The oils nourish and help restore the original look.

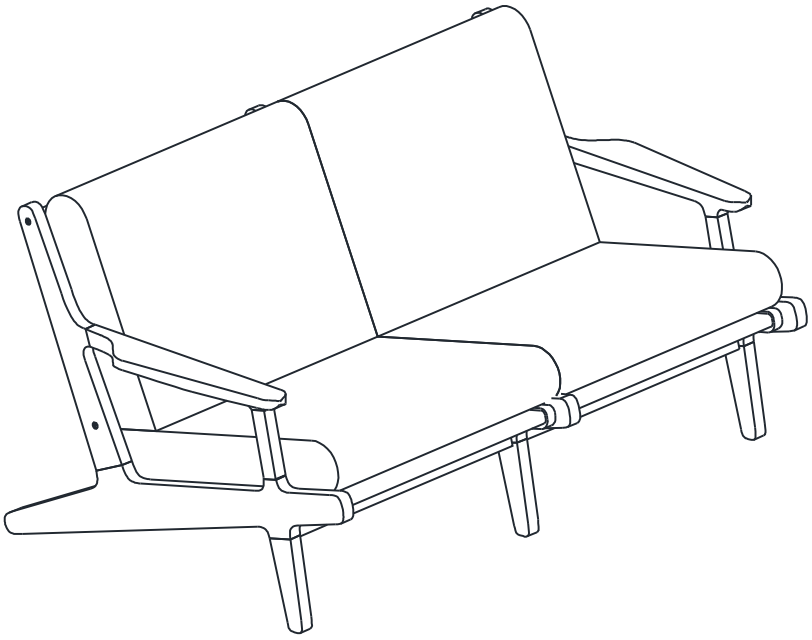

CONNECT WITH US!
Tag us **@modway_furniture** and **#modway** for a chance to be featured.